

When installing the lower arm uniball adapters follow these strict guidelines. Failure to do so can cause catastrophic issues. Do not use an impact gun.

- 1] **VERY IMPORTANT** Position uniball adaptor with snap ring facing UP and the flat side towards the brake rotor (outward). Also double check snap-ring is fully seated into groove.
- 2] Apply red loctite to threads and torque to 118 ft/lbs. using a 14mm hex bit.
- 3] Make sure the uniball spacer fully seats into the lower arm correctly before tightening.
- 4] Apply red loctite to threads and torque to 165 ft/lbs. using a 15/16" 6pt socket on the nut and 11/16" 12pt socket on the bolt head.

