

When installing the lower arm uniball adapters follow these strict guidelines. Failure to do so can cause catastrophic issues. Do not use an impact gun.

1] **VERY IMPORTANT** Position uniball adaptor with snap ring facing UP and the flat side towards the brake rotor (outward). Also double check snap-ring is fully seated into groove.

2] Apply red loctite to threads and torque to 220 ft/lbs. using a 27mm 6pt socket.

3] Make sure the uniball spacer fully seats into the lower arm correctly before tightening.

4] Apply red loctite to threads and torque to 260 ft/lbs. using a 1-1/8" 6pt socket on the nut and 13/16" 12pt socket on the bolt head.

