



FORD RANGER RAPTOR 2024-2025
FRONT COIL SPRING PRELOAD KIT
PART# CAM-110306

980065

Always inspect your suspension after off-roading and at your routine service intervals. Use of products sold by Camburg Engineering is at the consumer's own risk. Proper installation and proper use of all products must be followed for optimal safety and performance. Installing most suspension products will raise the center of gravity of the vehicle and can increase the susceptibility to a rollover and alter the handling characteristics. Camburg Engineering products may void aspects of the vehicles warranty. Camburg Engineering reserves the right to change the design, material or specifications of any product without assuming any obligation to modify any product previously manufactured and without prior notice. Every effort has been made to avoid printing errors and specifications. By purchasing, installing and/or using these products you are accepting these stated conditions and accept all liability and responsibility.



Thanks for purchasing our Camburg billet front coil spring preload kit for your Ford Ranger Raptor. If you are not installing these yourself have a qualified shop do so. These are designed to be used with the OEM FOX Live Valve shocks and OEM coil springs only. Camburg Engineering has made every attempt to insure you receive the highest quality components in the most complete manner. This is a guide to help you through the process. It's your responsibility to ensure parts are being installed correctly using the correct tools and procedures to the proper torque. For step-by-step instructions refer to a Ford service/repair manual.

WHAT'S INCLUDED	QTY
FRONT BILLET COIL SPRING PRELOAD SPACER	2
CAMBURG 8.5" STICKER	2

Important Notes:

- Fits Ranger Raptor models only with OEM FOX Live Valve shocks and OEM coil springs. Do not combine with aftermarket coil springs.
- Shocks will need to be removed from the vehicle and disassembled using a spring compressor.
- Preload spacer fits between the lower shock body and lower spring seat.
- Camburg logos face forward and rearward.
- Upon installation, a front end suspension alignment is required.
- Use RED loctite on all fasteners > 1/4" dia.
- Use BLUE loctite on all fasteners < 1/4" dia.
- Inspect and re-torque all hardware and components after the first 500 miles, inspect at your scheduled maintenance intervals and whenever using the vehicle off-road.

Beveled backside of spacer goes towards
lower spring seat drop-down wire mount

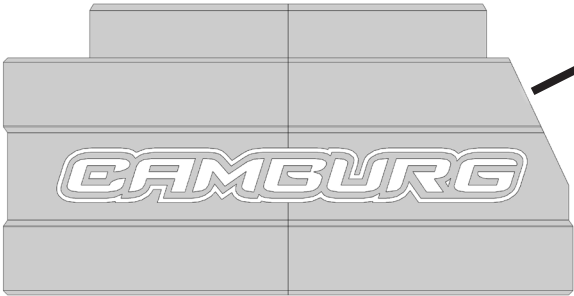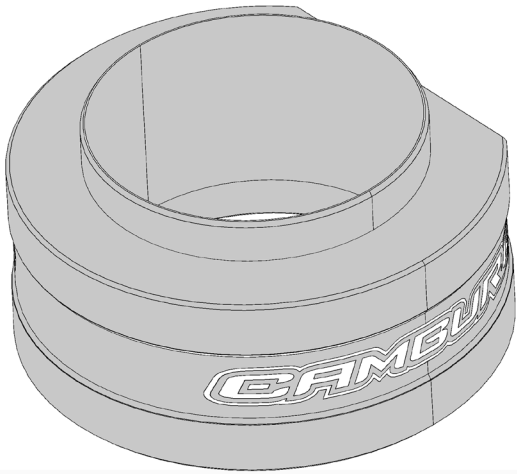

Warranty Information
Scan or Click QR Code